



## Description

BL100 - BEDLINER - BLACK (NATIONAL RULE)  
BL200 - BEDLINER - TINTABLE (NATIONAL RULE)  
BL100LV - BEDLINER - BLACK (1.6 VOC)  
BL200LV - BEDLINER - TINTABLE (1.6 VOC)



High Teck Bed Liner provides a high quality chemical resistant textured coating with an outstanding resistance to UV damage, and abrasion. Originally designed to be used on truck beds to withstand even the toughest conditions. It has 1000's of applications in automotive, agricultural, heavy machinery, commercial and anywhere else you need a long lasting durable coating. When performance counts this two-component urethane product is easy to mix and use, drying fast and lasting longer than any similar product. The BL200 Tintable Bed Liner has all the same great uses with the benefit of making it into any color you want.



## General Information

Ideal application temperature is 75°F with humidity of less than 60%.

- Mix and use product in a well-ventilated area
- Use PPE for any and all applications (appropriate respirator, eye protection, gloves, paint suit)



## Pot Life

Pot life is at least 50 min. at 75°F



## Coverage and Shelf Life

Practical coverage: 90-100 sq. ft. per 4 quart kit @ 15 mil.  
One kit will cover a standard size bed truck @ 15 mil.  
Shelf life: 12 months @ 72°F.



## Surface Preparation

Clean surface to be coated with wax and grease remover. Remove all loose paint and rust. Use an epoxy primer or etching primer on bare metal. Sand with 180 grit paper and remove all dust particles after sanding. Mask all areas not to be coated.




## Mixing Ratio

On Tintable clear base kits, add 3oz of basecoat or single stage tint to Part A **BEFORE** adding catalyst then replace lid and shake vigorously for 2 min or until uniform color is achieved. Ratio is 3:1. Each can of the "A" side is short filled to allow the addition of the catalyst. Fill each "A" can with 8 oz. of the "B" can.



## Application Directions

Replace cap and shake vigorously for 2 min. Remove cap and attach to Schutz gun.

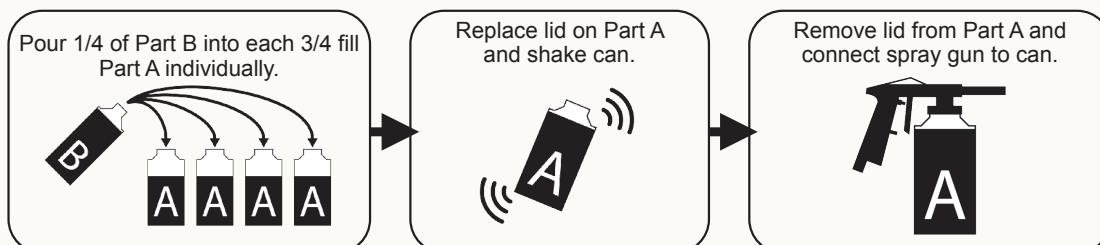



## **Application Directions (continued)**

Use Schutz type gun @ 40-70 psi Apply to back and sides of bed first. Spray to hide and allow to flash for 30 -60 minutes depending on temperature. If applying two coats you should clean spray equipment in between coats.

THEN apply texture coat by backing up from surface. Proceed to bed floor and repeat what was done on sides. For best results apply coverage coat to floor and then texture from standing outside the truck. For more texture use lower pressure and allow longer flash time before applying texture coat. Clean gun with lacquer thinner. Unmask vehicle within 30-45 min. Vehicle can be delivered in four to six hours. Full cure in 48 hours.

Need an application gun? Check out the Astro 4538 Economy Air Undercoat Gun! (male/male fitting also available - AST.453814F)

### **SEE SDS AND PRODUCT LABELS FOR ADDITIONAL SAFETY INFORMATION.**

**NOTE:** High Teck products are not recommended for use in temperatures below 65°F. Using High Teck products below these temperatures will effect dry times and product performance characteristics.